

Dear respected clients:

Welcome to choose LCD multiple function 6&1 automobile. modified meter

Method of installation:

1、 Fix the universal foot frame on the hook of the rear of meter (see Fig.1), then put it away at the best position, meter-table or shield-screen glass.

2、 Please install the general control box at the empty place of the cover of the engine, then pull out one end of the wire with plug and connect it into the plug at the rear of the meter (see Fig.2).

3、 Wire connection of the control box:

(1) Black wire connecting with the negative of storage battery.

(2) Red wire connecting with positive of electric door.

(3) Blue wire connecting with positive of storage of battery. (eternal power)

(5) Green wire connecting with the rotation signal of engine.

(5) White wire connecting with the water temperature sensor.

(6) Yellow wire connecting with oil temperature sensor.

(7) Double-color wire connecting with oil pressure sensor.

 
 
 
 
4、 Time adjusting

Press O key, it displays off automatically, repress the O key, the digital on the left will flash, then press M key and H key, adjust the time what you need, then repress the O key, it displays on, continue to press O key, it displays off, the digital on the right will flash, then press M key and H key to adjust the time what you need, then press O key, it displays on and it will be in the normal state.

5、 LCD plane display

Turn on the power and it will scan automatically, after scanning, it will fully display one second, then it will turn off one second for full screen, then it enters the normal state.






6、 Dial switch on the control box is used to adjust the stroke amount of engine(see Fig.3).

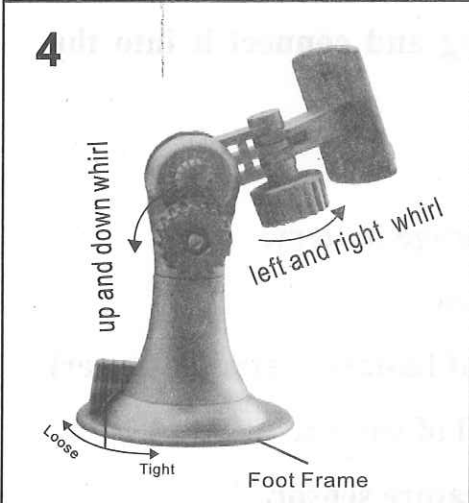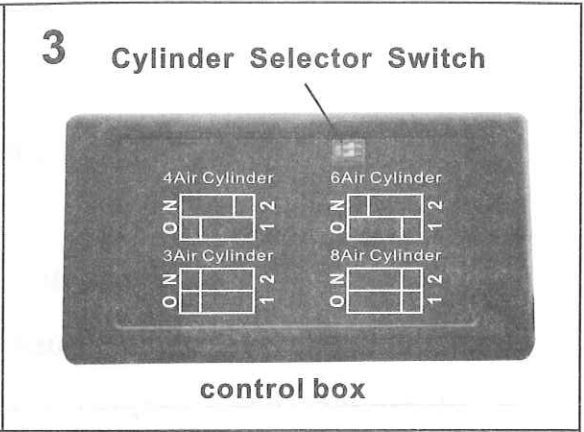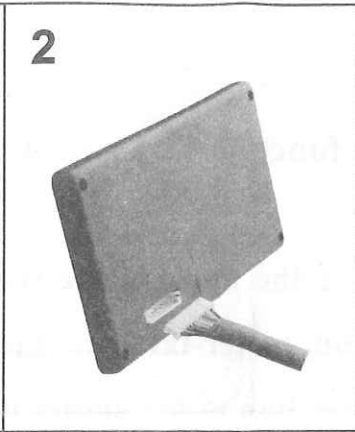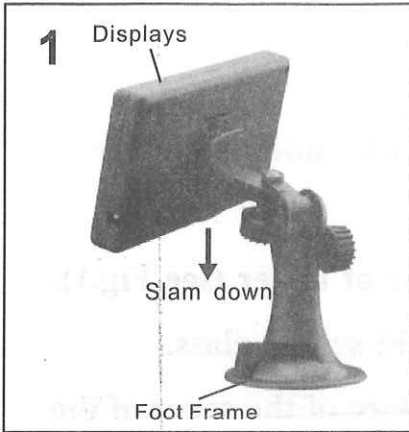

5

control box

     - RED - TO IGNITION SWITCH 12V(+)
- BLACK - BATTERY(-)
- GREEN - ON STANDARD COIL IGNITION
ATTACH WIRE TO NEGATIVE(-) SIDE OF COIL
ON ELECTRONIC IGNITION CONNECT THE GREEN WIRE TO TACHOMETER PULSE OUTPUT
- WHITE - TO TEMP SENSOR WHITE
- BLUE - TO CONNECTING WITH POSITIVE OF STORAGE OF BATTERY. (ETERNAL POWER)
- YELLOW - TO OIL TEMP SENSOR WHITE
- DOUBLE-COLOR WIRE CONNECTING WITH OIL PRESSURE SENSOR.

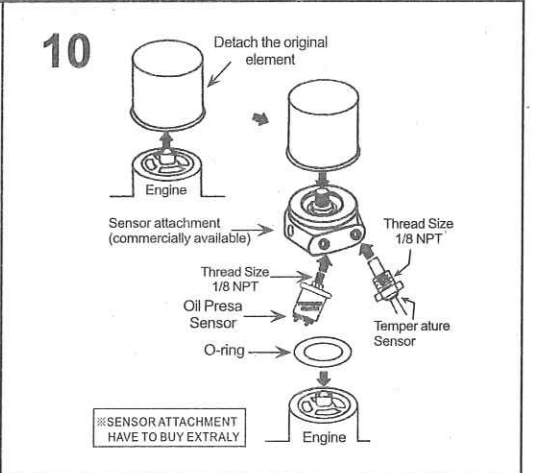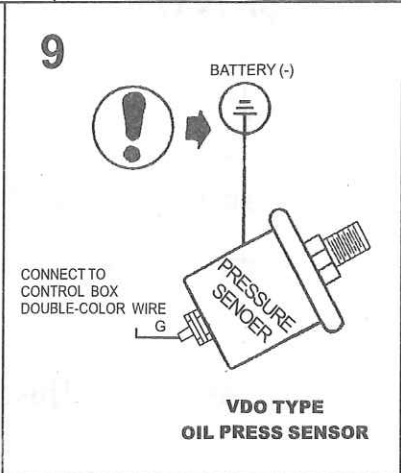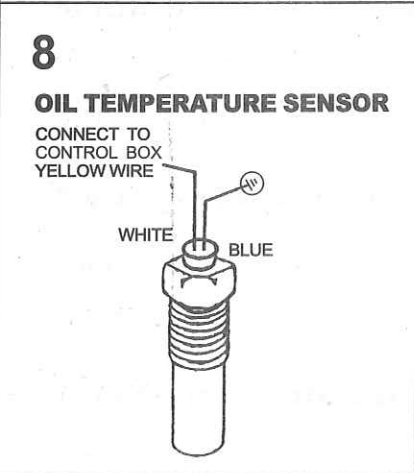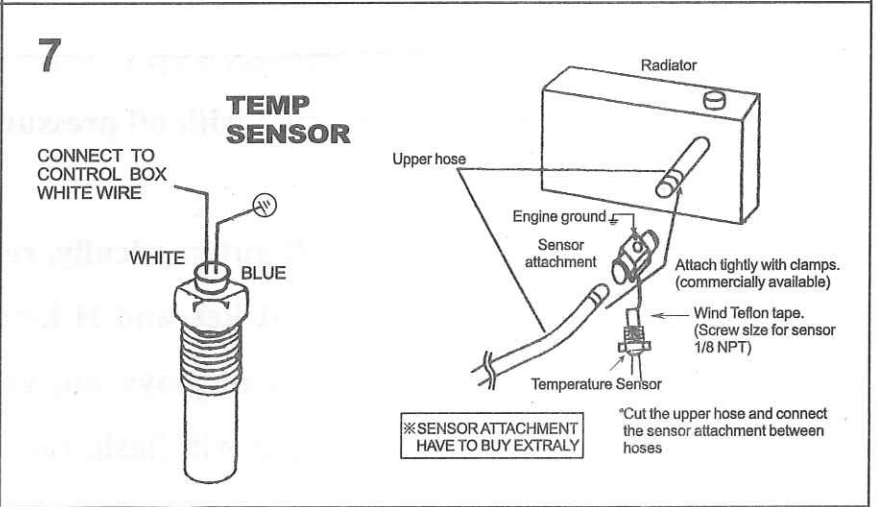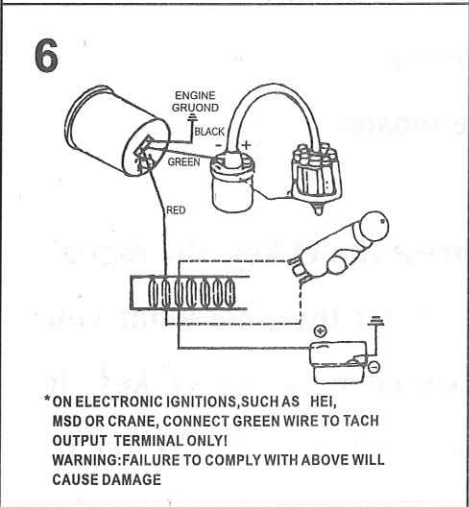

ATTENTION: SENSORS OF WATER TEMPERATURE GAUGE AND OIL TEMPERATURE GAUGE ARE UNIVERSAL.